

Default username and password for Netgear 7550 DSL modem

Manufacturer/Vendor **Netgear**
Product(s) **7550**



Summary

This article will assist a technician or end-user will access the administration interface of the Netgear 7550 using the default username and password.

Details

Prerequisites

- User must be connected to the LAN side of the Netgear 7550 modem.
- This article assume the Netgear 7550 is not bridged and default username / password have not been changed.

Solution

1. Default IP address: **http://192.168.254.254** or **http://192.168.1.1**
2. Default username: **admin**
3. Default password: **admin**

Article properties

KB Article ID: 00153

KB Article Permalink:

Category: [Netgear](#)

Published: Thu, Nov 3, 2016 at 10:55 AM

Updated: Thu, Nov 3, 2016 at 10:55 AM

This article has been viewed 284 times.
