

Disable SIP ALG on Netgear FVS336GV3

Manufacturer/Vendor **Netgear**
Product(s) **FVS336Gv3**



Summary

This article will assist a technician or end-user with disabling SIP ALG to support VoIP phones behind the Netgear FVS336GV3 device.

Details

Prerequisites

- User must have administrative rights to the device (if other than default).

Solution

1. Login to the device administration interface. [Default IP, username and password can be found here.](#)
2. In the menu bar, select **Security**.
3. Under the menu bar, select **Firewall**.
4. Click on the **Advanced** tab.
5. Uncheck **Enable SIP ALG**.
6. Click **Apply**.

Article properties

KB Article ID: 00154
KB Article Permalink:
Category: [Netgear](#)
Published: Thu, Nov 3, 2016 at 12:36 PM
Updated: Thu, Nov 3, 2016 at 12:40 PM
This article has been viewed 210 times.
