

# Disable SIP ALG on Asus RT-AC68U

Manufacturer/Vendor      **Asus**  
Product(s)                      **RT-AC68U**



## Summary

---

This article will assist a technician or end-user with disabling SIP ALG to support SIP VoIP phones behind the device.

## Details

---

### Prerequisites

- User must have administrative rights to the device (if other than default).

### Solution

1. Login to the device administration interface. [Default IP, username and password can be found here.](#)
2. Click on **WAN** on the left navigation bar.
3. Click on **NAT Passthrough** at the top of the page.
4. Change **SIP Passthrough** to **Disable**.
5. Click the **Apply** button.

## Article properties

---

KB Article ID:                      00002  
KB Article Permalink:  
Category:                              [Asus](#)  
Published:                            Tue, Sep 13, 2016 at 12:00 PM  
Updated:                              Tue, Oct 4, 2016 at 3:25 PM  
This article has been viewed 2578 times.

---